



Spin EL & ELF Pro EL Assembly Instructions

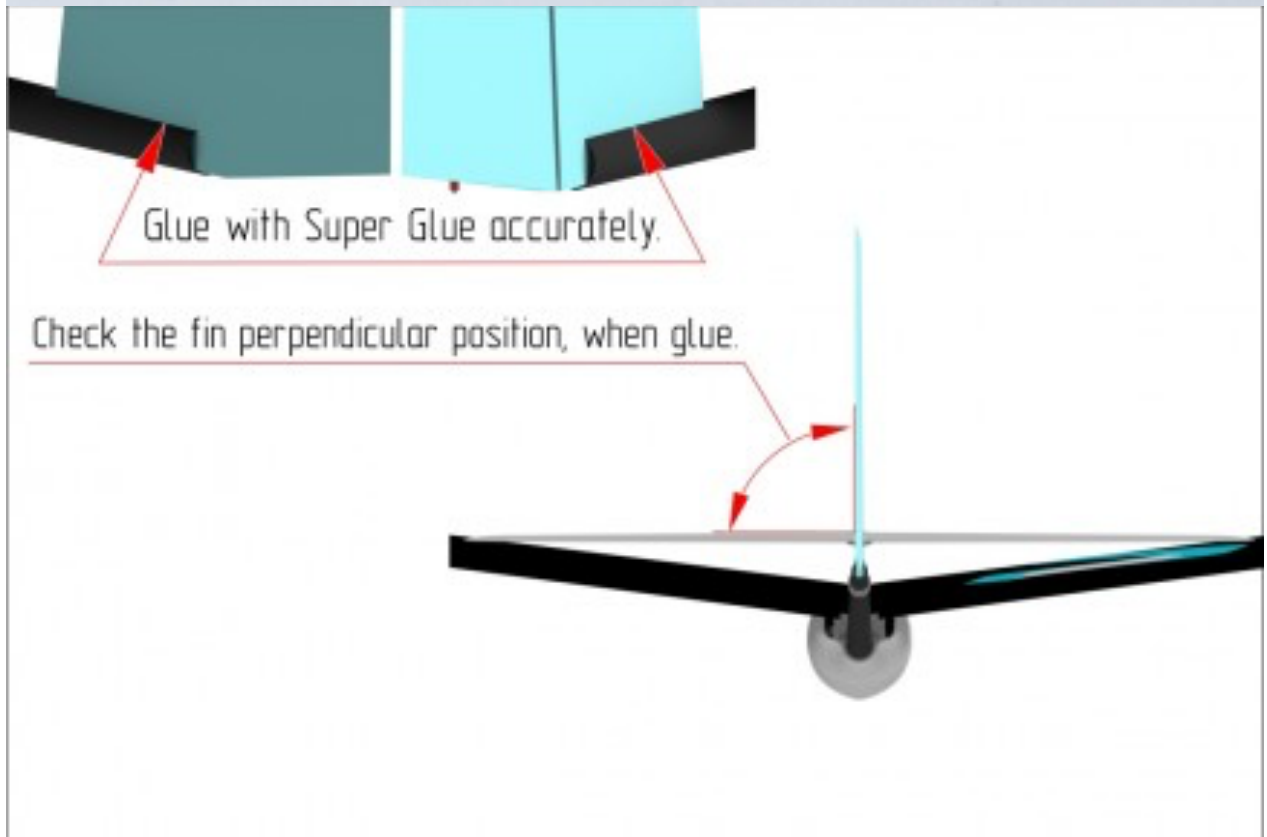


Spin EL & ELF Pro EL Assembly Instructions

Spin/ELF Pro elevator servo neutral position

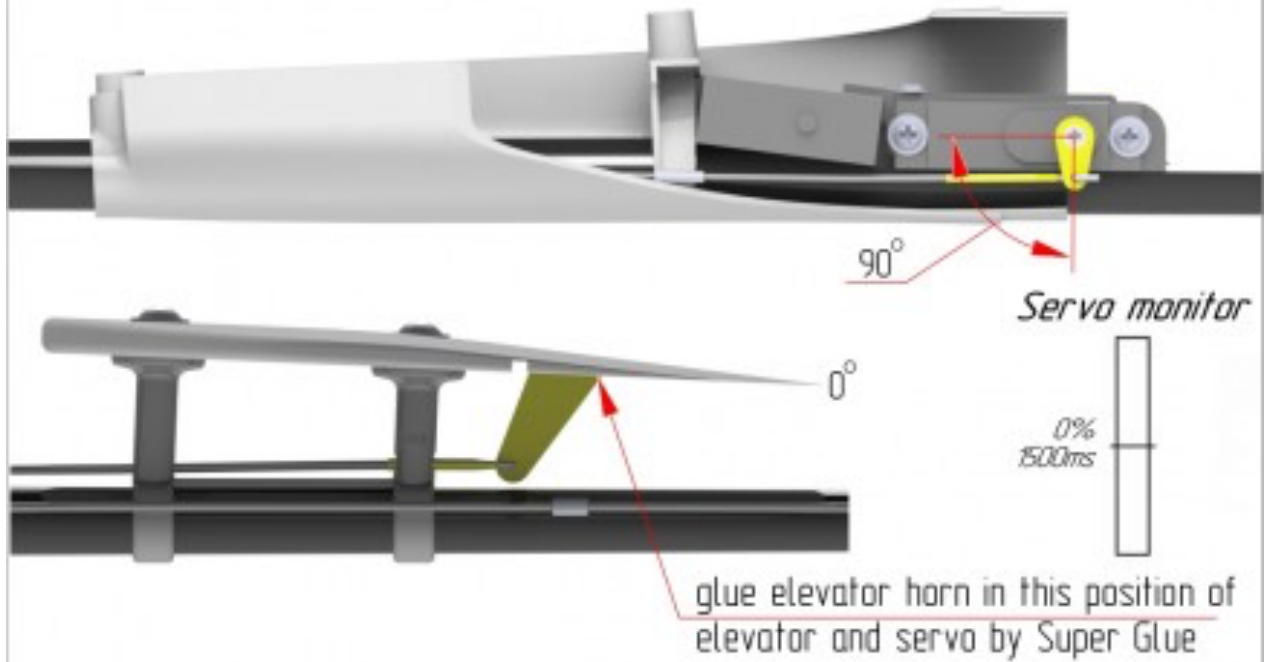


Spin/ELF Pro fuselage SD-100 (D47) mount plate

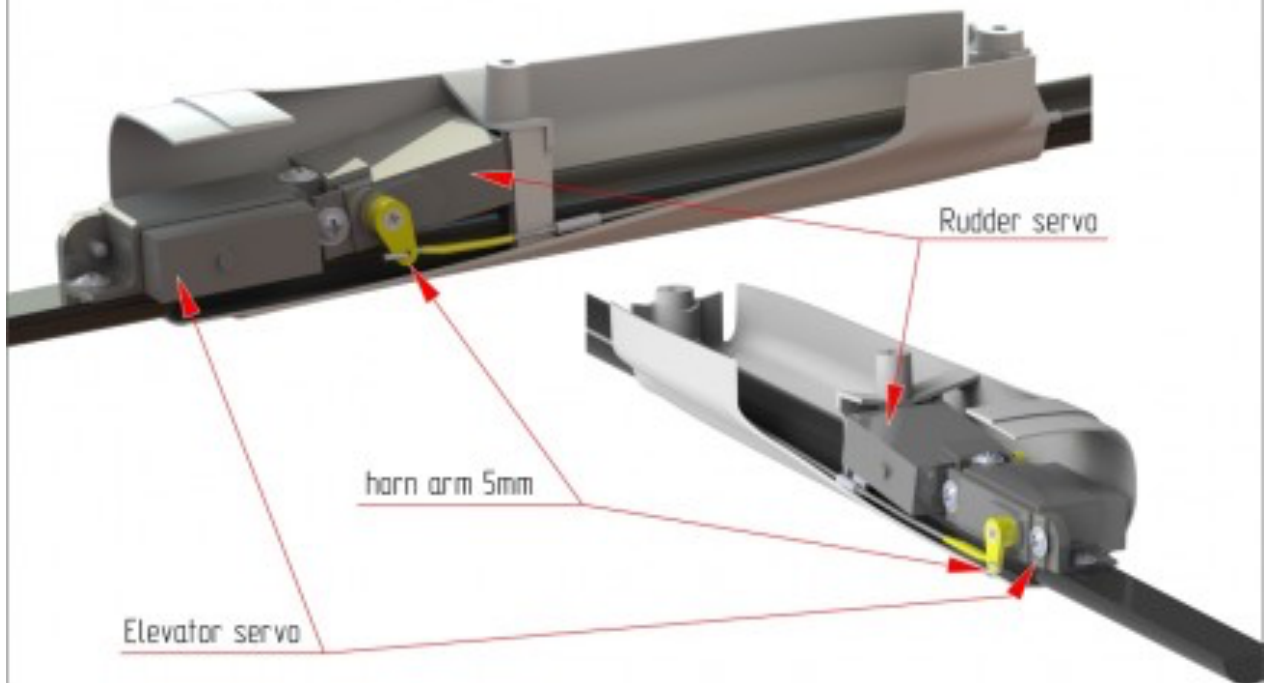


Spin EL & ELF Pro EL Assembly Instructions

Spin/ELF Pro rudder servo neutral position

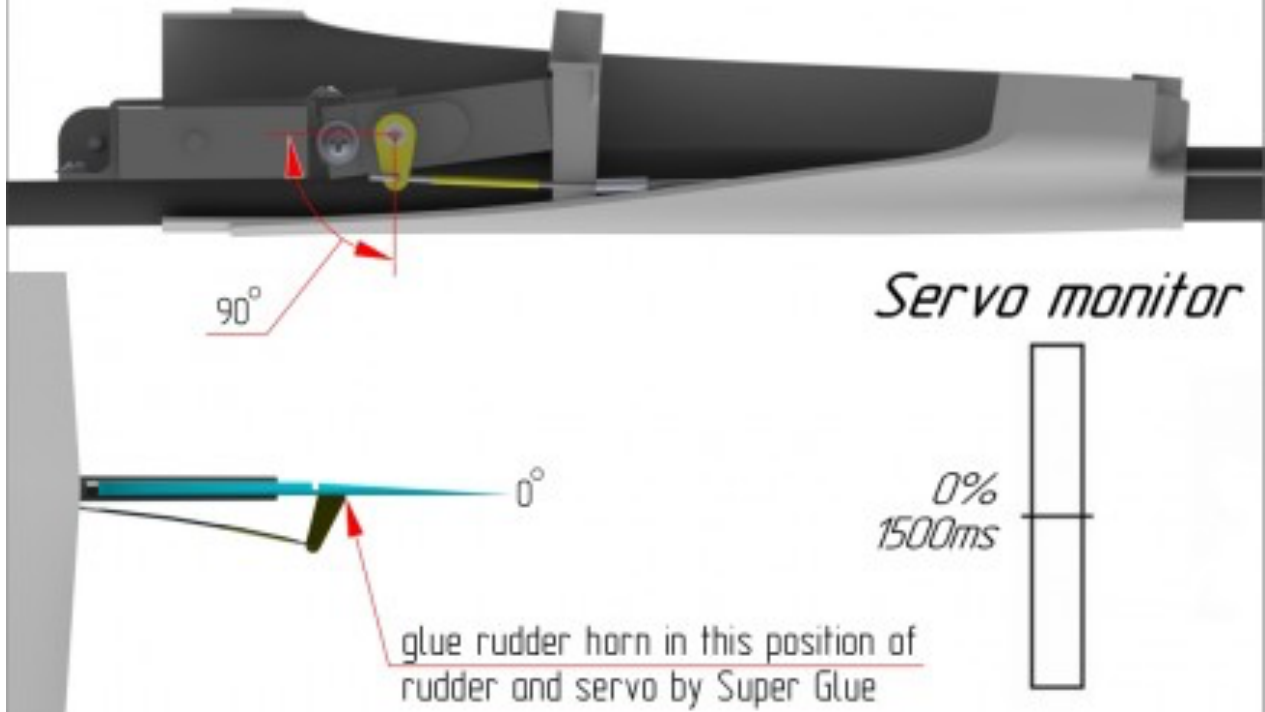

Spin wing D47 (SD-100) servos

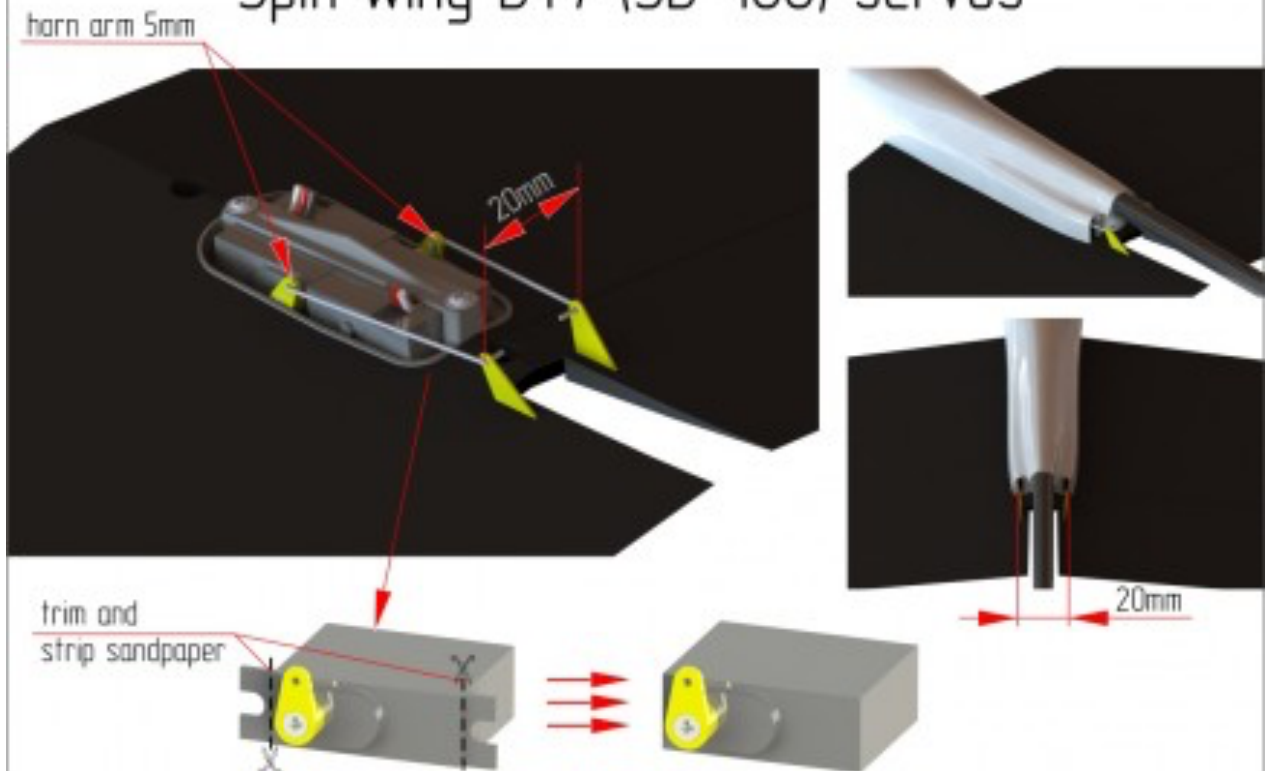

Spin EL & ELF Pro EL Assembly Instructions

